

PANEL HEATER

OPERATING INSTRUCTIONS



For Models: CELEPANEL, CELEPANELT

WARNINGS AND SAFEGUARDS

1. Use only the voltage specified on the rating label of the appliance.
2. Keep all objects at least 1 metre from the front and sides of the appliance. Do not place appliance close to radiant heat source.
3. Do not operate in areas where petrol, paint or other flammable liquids are used or stored.
4. Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance. Do not sit on the appliance.
5. Do not operate this appliance with a damaged cord, plug or after the appliance malfunctions or has been dropped or damaged in any manner. Return to a qualified electrical person for examination, electrical service or repair.
6. This appliance is intended for household use only and not for commercial or industrial use.
7. Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electrical shock or injury.
8. The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air vents and grills.
9. Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning.
10. Do not connect the appliance to mains supply until completely assembled and adjusted.
11. Switch off when moving.
12. Do not operate with cord set coiled up as a heat build up is likely, which could be sufficient to become a hazard.
13. Do not use an extension cord, power board or external timer with this appliance.
14. Do not remove plug from power socket until the appliance has been switched off.
15. Do not remove plug from power socket by pulling cord; always grip plug.
16. Always unplug appliance when not in use.
17. Do not locate the heater directly below any power socket during operation.
18. Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that all cord has been removed from any cord storage area and is unrolled before use.
19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the appliance by a person responsible for their safety.
20. Do not use this appliance in the immediate surrounds of a bath, a shower, or a swimming pool or other liquids. The appliance must not be immersed in any liquids.
21. When the appliance has been unpacked, check it for transport damage and ensure all parts have been delivered. If parts are missing or the appliance has been damaged, contact the Celsius Customer Services Team.
22. If your appliance does not work, or is not working properly, contact the place of purchase or the Celsius Customer Services Team. Repair work on the appliance by unqualified persons can cause serious risk to the user.
23. There are no user serviceable parts installed in the unit.
24. Do not place the unit in wardrobes or other enclosed spaces as this may cause fire hazards.
25. This unit is not supposed to be used in or around locations where foodstuffs, works of art or delicate articles of science, etc are stored.
26. Indoor use only.
27. Children should be supervised to ensure that they do not play with the appliance.



 
SUPPORT AND TECHNICAL ADVICE

Celsius – New Zealand
Monday – Friday 8am-5pm
Phone +64 (0)9 917 4000
Phone 0800 232 633
info@celsius.co.nz

Celsius – Australia
Monday – Friday 8am-5pm
Phone +61 (0)3 9336 4423
Phone 1300 465 324
info@celsius.co.nz

WALL MOUNTING POSITION INSTRUCTIONS

NOTE: Your Celsius panel heater should be installed with at least 300mm clearance from the floor and any other surrounding parts including other appliances, side walls, ceilings, shelves and soft furnishings.

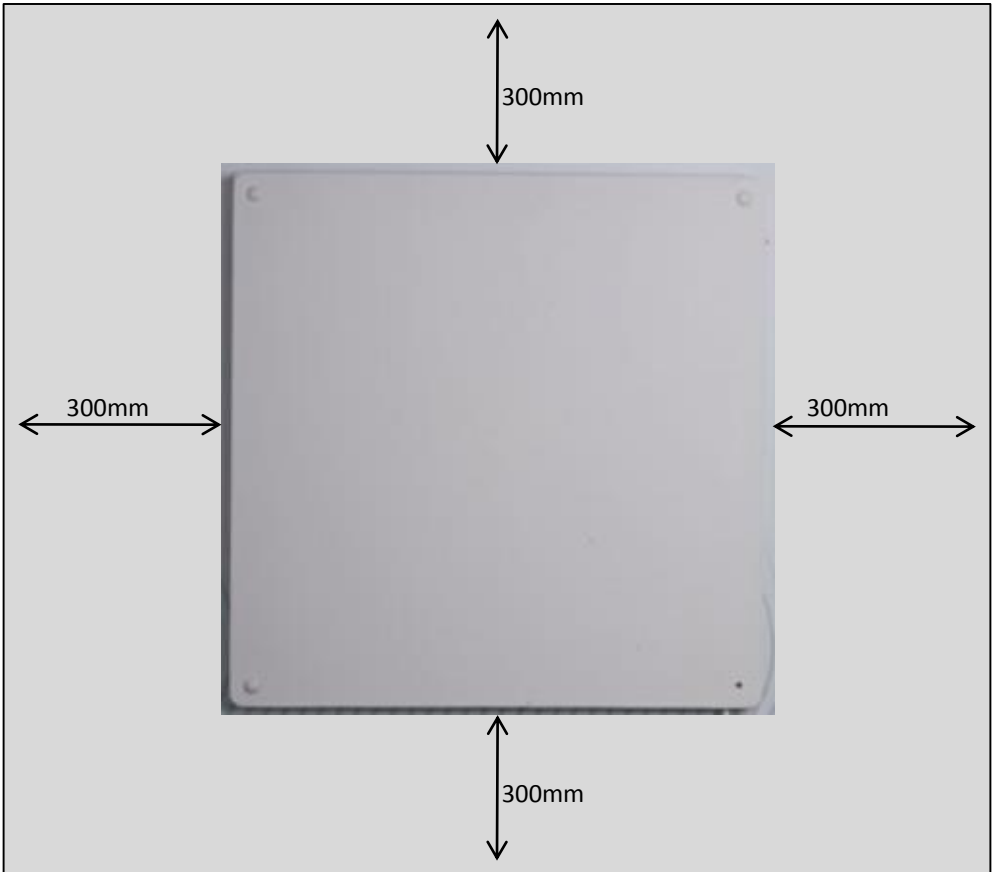

CONTENTS

- 1 x Celsius panel heater
- 1 x Wall mounting accessories pack
- 2 x Drill bits (1 x 7mm for plasterboard or wooden walls, 1 x 8mm for drilling masonry)
- 4 x Rail fittings
- 4 x Screw bolts
- 4 x Bolt caps

 
 
 
 
 
 
NOTE: Please ensure you use the correct drill bit for the wall surface material you are mounting on to. Please contact your local hardware retailer or builder for advice.

WALL MOUNTING INSTRUCTIONS

Always choose a safe location for the heater, keeping in mind the safety precautions outlined. Ensure all packaging and the wall mounting accessories pack has been removed from the unit before use.

1. Mark the positions of the four holes to be drilled on the wall. Ensure there is a 300mm clearance on all sides of the heater.
2. Drill holes with an appropriate drill bit for the wall type you are mounting the heater on to.
3. Insert the plastic rail fittings into the holes.
4. Install the panel heater onto the four rail fittings matching the four holes on the heater.
5. Screw the four screw bolts into the plastic rail fittings.
6. Put the caps onto the end of the screw bolts. It is recommended to use some normal glue to stick the caps onto the bolts.

To remove the unit from the wall, simply remove the bolt caps, unscrew the bolts with a screw driver and take the heater down.

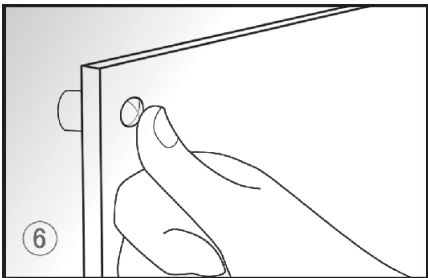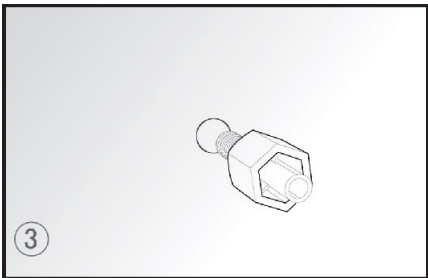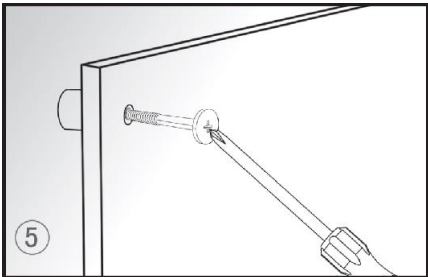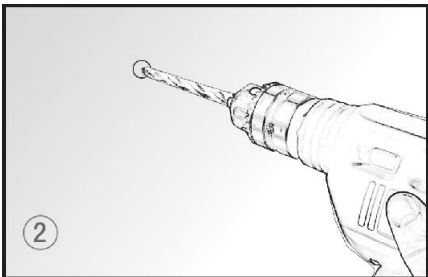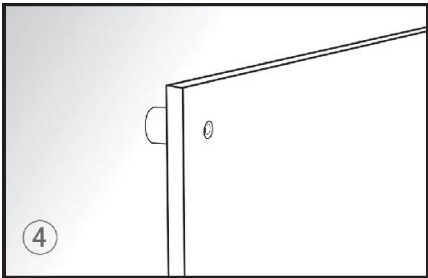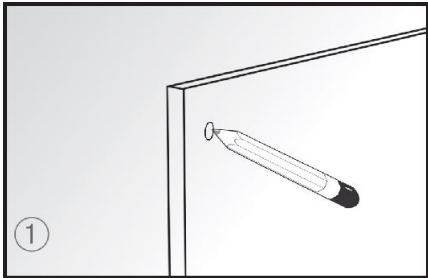

OVERVIEW OF YOUR CELSIUS PANEL HEATER

Your Celsius Panel Heater will provide background warmth.

Your Panel Heater is designed to take the chill off the room.

The surface of this Panel Heater can be painted with good quality paint (acrylic or enamel).

Decorating tip: All wall mounted heaters may cause paint to discolour or wall paper to lift.

OPERATING YOUR HEATER

Always choose a safe location for the heater, keeping in mind the safety precautions outlined. Ensure all packaging has been removed from the unit before use.

OPERATING INSTRUCTIONS

1. Before plugging in and using your new Celsius Panel Heater, check all surfaces to ensure the heater is not damaged in any way.
2. Check that the On/Off switch is set to the Off position before plugging the heater into the mains supply.
3. Use the On/Off switch along the side of the heater to turn your heater on.

CARE AND CLEANING

Do not attempt to dismantle the panel heater. There are no user serviceable parts. For service or repair, contact an authorised electrical service technician.

Unplug the heater from the mains supply before cleaning. Ensure that the heater has been allowed to cool down completely before cleaning.

To remove the unit from the wall, simply remove the bolt caps, unscrew the bolts with a screw driver and then take the heater down. Use a vacuum cleaner to remove dust and fluff from behind the heater.

The outside can be cleaned by wiping it over with a soft dry cloth.

NOTE: Do not use abrasive cleaning agents or polish, this can damage the surface and finish.

For short term non-use, simply turn off the unit with the power switch on the side of the heater and disconnect the mains power supply at the wall.

SAFETY FEATURE

In case of overheating, this heater is fitted with a thermal fuse which is located inside the construction of the heater. If this thermal fuse activates it will turn the heater off however the light in the power switch will remain on to let you know there is still power going into the heater.

In the event that this happens, turn the heater off at the switch and the wall socket and unplug it. Then contact our Customer Service Team.

WARNING: Do not use this heater with a separate programmer, remote-control system, separate timer, or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.

WARNING: Keep all objects at least 1 metre from the front and sides of the appliance.

CAUTION: The heater generates heat during use. Proper precautions must be taken to prevent the risk of burns, scalds, fires or other damage to persons.

IMPORTANT! NEVER COVER THIS HEATER

PROOF OF PURCHASE

To receive warranty retain receipt as proof of purchase. Refer to back of booklet.

TECHNICAL SPECIFICATION

Model No: CELEPANEL, CELEPANELT
Supply: 220-240VAC 50Hz
Wattage: 400-425W

PLEASE NOTE: As the CELEPANELT model is fitted with a timer, the timer has been set to the “ON” position.

SETTING THE TIMER

Turn the outer dial of the timer in a clockwise direction until the time of the day (24-hour clock) corresponds with the triangular marking. Example if it is 2pm (1400 hours) then set the triangular mark in line with 14. One complete turn of the dial corresponds to 24 hours.

There are 96 “riders”, positioned around the dial, each rider represents 15 minutes.

Where all the “riders” are pushed to the outside of the timer the heater will be ON continuously.

 
To set a specific time for example:

If you want the heater to be on from 6pm to 10pm, then set all the riders from 18 to 22 (1800 hours to 2200 hours) to the outside of the rim and all other riders to the inside of the timer. The unit will then turn on automatically at 6pm and off again at 10pm.

WARNING! Take care in positioning your heater, using the timer will mean the heater will come on automatically. Fire may result if placed next to combustible material.

Riders pushed to
the outside rim to
turn ON

Indicates actual
time

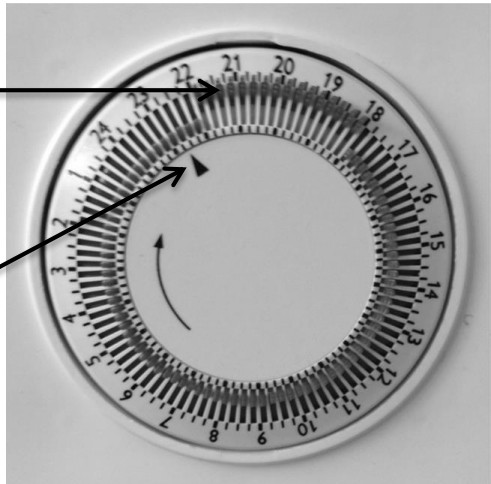



Two Year Warranty

Thank you for purchasing this Celsius product. Your product is warranted against faults and manufacture when used in normal domestic use for a period of two **years**. In non-domestic use Celsius limits the voluntary warranty to **three months**.

Celsius undertake to repair or replace this product at no charge if found to be defective due to a manufacturing fault during the warranty period.

This warranty excludes damage caused by misuse, neglect, shipping accident, incorrect installation, or work carried out by anyone other than a qualified electrical service technician.

PLEASE KEEP YOUR RECEIPT AS THIS WILL HELP VERIFY YOUR WARRANTY.

The benefits to you given by this warranty are in addition to other rights and remedies available to you under a law in relation to the goods or services to which this warranty relates.

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand this warranty is additional to the conditions and guarantees of the Consumers Guarantee Act (1993).

Celsius – New Zealand

PO Box 100-707

N.S.M.C

Auckland

Phone +64 (0)9 917 4000

Phone 0800 232 633

info@celsius.co.nz

Celsius – Australia

PO Box 574

South Morang

Victoria, 3752

Phone +61 (0)3 9336 4423

Phone 1300 465 324

info@celsius.co.nz

Celsius Two Year Warranty (IMPORTANT: Please complete and retain this warranty card)

Name _____

Address _____

Place Of Purchase _____ Date Of Purchase _____

Name Of Product _____ Model Number _____

Attach a copy of the purchase receipt to this warranty card